

SERVICE MANUAL

DAIHATSU **ROCKY**

FOREWORD

This service manual describes the maintenance and servicing procedures for the 1992 Daihatsu Rocky.

Applicable Model: F300

In this service manual, the entire portion is divided into 23 sections and four supplements. Each section has an index along with a table of contents in the beginning. For easier reference, the upper part of each page bears the section title concerned.

All information used in this service manual was in effect at the time when the manual was approved for printing. However, the specifications and procedures may be revised due to the continuing improvements in the design without advance notice and without incurring any obligation to us.

DAIHATSU MOTOR CO., LTD.



© 1992 DAIHATSU MOTOR CO., LTD.

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.

WRU92-00005

SECTION INDEX

NAME	SECTION
GENERAL INFORMATION	GI
MAINTENANCE	MA
ENGINE MECHANICAL	EM
EMISSION CONTROL SYSTEM	EC
EFI SYSTEM	EF
COOLING SYSTEM	CO
LUBRICATION SYSTEM	LU
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
CLUTCH	CL
MANUAL TRANSMISSION	MT
TRANSMISSION & TRANSFER	TR
PROPELLER SHAFTS	PR
FRONT & REAR DIFFERENTIAL	DF
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
BRAKE SYSTEM	BR
STEERING	SR
BODY	BO
AIR CONDITIONING SYSTEM	AC
BODY ELECTRICAL SYSTEM	BE
HARNESS & WIRING DIAGRAM	HW
SST & MATERIAL	A
SPECIFICATIONS	B
TIGHTENING TORQUE	C
CONVERSION TABLE	D

IMPORTANT SAFETY NOTICE

The vehicle is a machine comprising a great number of parts. Basically speaking, the vehicle is potentially hazard. However, one can handle it safely if he has the required knowledge.

Correct service methods and repair procedures are very vital for assuring not only the safety and reliability of a vehicle, but also the safety of service personnel concerned.

The methods and procedures contained in this manual describe in a general way the techniques which the manufacturer has recommended. Thus, they will contribute to ensuring the reliability of the products. The contents of the servicing operations come in a wide variety of ways. Moreover, techniques, tools and parts necessary for each operation are different widely from each other.

This manual does not cover all details of techniques, procedures, parts, tools and handling instructions which are necessary for these operations, for such coverage is impossible. Hence, any one who obtains this manual is expected first to make his responsible selection as to techniques, tools and parts which are necessary for servicing the vehicle concerned properly. Furthermore, he must assume responsibility for his actions in connection with his own safety.

Therefore, one should not perform any service if he is not capable of making responsible selection and/or if he can not understand the contents herein described, for this manual has been prepared for experienced service personnel.

WRU90-00003

The following list describes general WARNINGS:

- Always wear safety glasses for eye protection.
- Use safety stands whenever a procedure requires you to be under the vehicle.
- Be sure that the ignition switch is always in the OFF position, unless otherwise required by the procedure.
- Set the parking brake when working on the vehicle.
- Operate the engine only in a well-ventilated area to avoid the danger of carbon monoxide.
- Keep yourself and your clothing away moving parts, when the engine is running, especially from the fan and belts.
- To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter and muffler.
- Do not smoke while working on a vehicle.
- To avoid injury, always remove rings, watches, loose hanging jewelry, and loose clothing before beginning to work on a vehicle.
- Keep hands and other objects clear of radiator fan blades! The electric cooling fan is mounted on the radiator and can start to operate at any time by an increase in underhood temperature. The electric cooling fan is also mounted on the condenser for air conditioner and start to operate in anytime during air conditioner switch "ON". For this reason care should be taken to ensure that the electric cooling fan motor is completely disconnected when working under the hood.

WRU90-00004