

# **DAIHATSU**



 

 
 
 
 
 


 
# **Rocky**

 
 
 
 
 
 
 

 
 

 
## **SUPPLEMENT A**

**SST (Special Service Tools) ..... A-2**  
WRU90-A001

**A**

# **SST (Special Service Tools)**



 



 


 

 
Shape	Part No. & Part Name	Section										
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Differential	Front axle & Suspension	Rear axle & Suspension	Brake	Steering	Body	Body electrical
	09032-00100-000 Oil pan seal cutter	<input type="radio"/>										
	09090-04010-000 Engine sling device	<input type="radio"/>										
	09201-87704-000 Valve stem oil seal remover	<input type="radio"/>										
	09201-87705-000 Valve guide bush remover & replacer	<input type="radio"/>										
	09202-87002-000 Valve cotter remover & replacer	<input type="radio"/>										
	09210-87701-000 Flywheel holder	<input type="radio"/>										
	09217-87001-000 Piston replacing guide	<input type="radio"/>										
	09219-87202-000 Engine overhaul stand	<input type="radio"/>		<input type="radio"/>		<input type="radio"/>						
	09219-87701-000 Engine overhaul attachment	<input type="radio"/>										
	09221-87704-000 Piston pin remover & replacer body	<input type="radio"/>										
	09221-87705-000 Piston pin remover & replacer guide	<input type="radio"/>										
	09223-41020-000 Crankshaft rear oil seal replacer	<input type="radio"/>										

Shape	Part No. & Part Name	Section										
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Differential	Front axle & Suspension	Rear axle & Suspension	Brake	Steering	Body	Body electrical
	09223-87201-000 Oil filter wrench	○										
	09236-00100-000 Water pump overhaul tool	○										
	09258-00030-000 Plug set	○										
	09268-87701-000 EFI fuel pressure gauge	○										
	09268-87702-000 Injection measuring tool set	○										
	09268-87703-000 Plug wrench	○										
	09268-87704-000 Oil cooler set bolt box wrench	○										
	09278-87201-000 Timing belt pulley holding tool	○										
	09283-87703-000 Pressure regulator adopter	○										
	09609-20011-000 Steering wheel puller	○										
	09842-30070-000 EFI inspection wire F	○										
	09842-87704-000 EFI computer check sub harness	○										

## SUPPLEMENT A

 
 
 
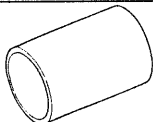 
 
 
 
 
 

 

[illegible]

WRU90-A004


 
Shape	Part No. & Part Name	Section										
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Differential	Front axle & Suspension	Rear axle & Suspension	Brake	Steering	Body	Body electrical
	09308-00010-000 Oil seal puller					○	○	○				
	09737-87001-000 Brake booster push rod gauge								○			
	09511-87202-000 Brake drum stopper						○					
	09520-00031-000 Rear axle shaft puller						○	○				
	09520-87603-000 Rear wheel bearing puller set							○				
	09607-87602-000 Front axle bearing lock nut wrench						○					
	09607-87603-000 Front axle hub nut wrench						○					
	09608-87603-000 Front axle hub outer bearing outer race replacer						○					
	09608-87604-000 Front axle hub inner bearing outer race replacer						○	○				
	09608-87605-000 Steering knuckle oil seal & dust deflector replacer						○					
	09608-87606-000 Rear axle shaft oil seal replacer							○				
	09608-87607-000 Leaf spring bush No. 1 remover & replacer							○				

WRU90-A005

# SUPPLEMENT A

 

 
 

 
 

 
 
 
Shape	Part No. & Part Name	Section										
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Differential	Front axle & Suspension	Rear axle & Suspension	Brake	Steering	Body	Body electrical
	09608-87608-000 Leaf spring bush No. 2 remover & replacer							○				
	09608-87609-000 Upper arm bush remover						○					
	09608-87610-000 Upper arm bush replacer						○					
	09608-87611-000 Lower arm dust cover & tie rod end dust cover replacer						○			○		
	09608-87612-000 Upper arm bush remover & replacer holder						○					
	09608-87613-000 Pitman arm tie rod end dust cover & hub cap replacer						○			○		
	09608-87614-000 Idler arm dust cover replacer									○		
	09608-87615-000 Lower arm bush remover & replacer						○					
	09610-20012-000 Pitman arm puller						○			○		
	09610-87301-000 Pitman arm puller									○		
	09611-87506-000 Handle						○	○				
	09611-87701-000 Tie rod end puller									○		

WRU90-A006

Section		Engine	Clutch	Transmission & Transfer	Propeller shaft	Differential	Front axle & Suspension	Rear axle & Suspension	Brake	Steering	Body	Body electrical
Shape	Part No. & Part Name											
	09616-00010-000 Steering pinion bearing adjusting socket									○		
	09608-87602-000 Front axle hub oil seal replacer						○					





 

 

 
 
 

 
WRU92-A012

# SUPPLEMENT A

Shape	Part No. & Part Name	Section											
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Front axle & Suspension	Rear axle & Suspension	Front/Rear Differential	Steering	Brake	Body	Air Conditioner	
	09201-60011-000 Valve guide bush remover & replacer		○										
	09201-87201-000 Valve guide bush remover & replacer	○		○									
	09219-87203-000 Engine overhaul attachment (Commercially-available)			○									
	09253-87101-000 Water pump bearing anvil [Crankshaft center bearing anvil]							○					
	09301-87601-000 Clutch guide tool		○										
	09302-87702-000 Clutch diaphragm spring height No. 5 gauge		○										
	09304-87601-000 Replacer input shaft bearing			○									
	09306-87601-000 Replacer counter shaft bearing			○									
	09306-87602-000 Puller counter gear front bearing			○									
	09308-10010-000 Oil seal puller							○					
	09309-87201-000 Transmission bearing replacer			○									

 
 

 
 



 
WRU90-A008



Shape	Part No. & Part Name	Section										
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Front axle & Suspension	Rear axle & Suspension	Front/Rear Differential	Steering	Brake	Body	Air Conditioner
	09309-87202-000 Transmission bearing replacer							○				
	09309-87301-000 Output shaft bearing replacer			○								
	09310-87102-000 Counter shaft rear bearing replacer			○								
	09326-20020-000 Output shaft bearing lock nut wrench			○								
	09330-00021-000 Companion flange holding tool							○				
	09333-00012-000 Clutch diaphragm spring aligner		○									
	09339-87301-000 Shift fork shaft guide			○								
	09458-87601-000 Attachment differential overhaul							○				
	09502-10012-000 Differential side bearing puller							○				
	09504-87601-000 Differential side bearing adjust nut wrench							○				
	09517-87601-000 Replacer oil seal			○				○				
	09517-87602-000 Attachment oil seal puller							○				
	09520-87604-000 Puller universal joint				○							

WRU90-A009

# SUPPLEMENT A

Shape	Part No. & Part Name	Section										
		Engine	Clutch	Transmission & Transfer	Propeller shaft	Front axle & Suspension	Rear axle & Suspension	Front/Rear Differential	Steering	Brake	Body	Air Conditioner
	09530-87602-000 Rear differential drive pinion adjust gauge set							○				
	09530-87603-000 Front differential drive pinion adjust gauge set							○				
	09602-87301-000 Counter gear bearing puller			○								
	09608-87302-000 Axle hub & drive pinion bearing tool set			○				○				
	09612-12010-000 Steering gear housing overhaul			○								
	09636-20010-000 Upper ball joint dust cover replacer							○				
	09801-87701-000 Air conditioner magnet clutch remover											○
	09802-87702-000 Air conditioner magnet clutch stopper											○
	09804-87701-000 Air conditioner bit set											○

WRU90-A010

[illegible]